PYLE®

disc jam

800 Watt Powered Two-Way PA Speaker System W/ Usb/Sd, Fm Radio, 3.5 MM Aux Input & DJ Lights

WWW. Pyleaudio.con

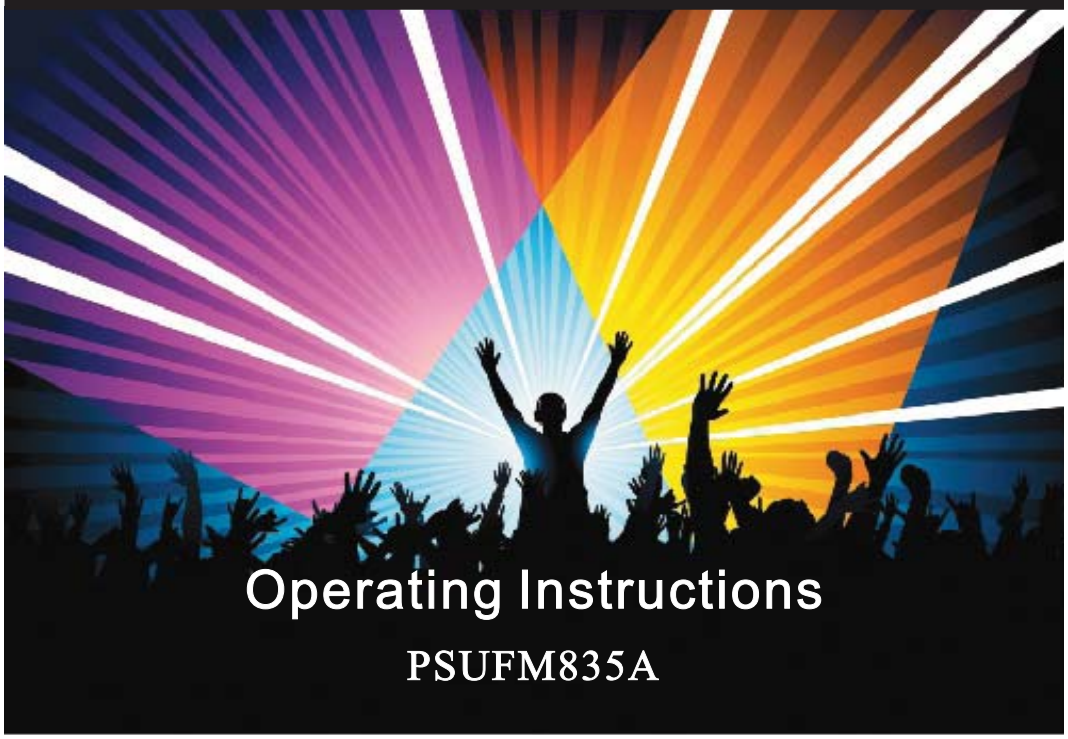

Operating Instructions

PSUFM835A

Specifications

PSUFM835A

*Dual Speaker (One Active, One Passive)
*8" Woofer and 3.5" Piezo Tweeter
*Heavy Duty Handles For Easy Portability
*Fully Featured 3 Channel Mixer
*Two Microphone Inputs
*One 3.5mm AUX Line Input With Cable (CompatibleWith iPhone Samsung and All MP3 Players And DevicesWith Headphone Outputs)
*RCA Stereo Input And Output
*USB/SD Flash And Card Reader Function With FM Radio
*USB Provides 5V 1A Charge For Smart Phones And Other Devices
*Display Screen Shows Number Of Songs, Play TimeAnd Fm Radio Frequency
*Master Volume Control
*Power Handling: 800 Watts Peak Power/400 Watts RMS @4ohm
*Speaker Output For Passive Speaker
*Woofer Magnet Weight: 10 Oz
*Sensitivity (1W/1M): 90Db
*Ported Enclosure For Added Bass Response
*Built In Crossover Network
*Crossover Frequency: 3.5kHz
*Frequency Response: 20Hz-20Khz
*Crossover Frequency: 3.5kHz
*35mm Speaker Stand Mount
*Ac 110/220v Power Switch
*Dimensions: 20.3(H) X 19.7" (W) X 12.6" (D)

Safety Notes

1. Correct power must be used to operate this unit properly, do not use any other powering options, cords or methods.

2. Carfully handle, plug and unplug the power cable when handling. Hold the plug with a firm grip and when plugging or unplugging from sockets.

3. Do not open chassis! Extermely dangerous! Do not put your hands inside the chassis. If the device begins to malfunction do not attempt to repair, unplug the unit and contact Pyle immediately.

4. Don't use volatile or dangerous chemical cleaners on the unit (like toluene, alcohol, gasoline etc.) Use gentle cleaners.

5. Keep the unit in a well ventilated environment and keep away from, direct sunlight to prevent unit from overheating.

6. Prevent the unit from moisture or rain.

Operating Controls - System Layout

① Volume Control

② Treble Control

③ Bass Control

④ Mic Volume Control

⑤ Echo Control

⑥ Mic Input Jack

⑦ Line-In/Aux Audio Input

⑧ Mode Control

⑨ Next Control

⑩ Play/Pause Control

⑪ Prev Control

⑫ USB/SD Jack

⑬ Speaker handle

⑭ Metal Corner

⑮ Tweeters

⑯ Woofer confinement

⑰ Woofer Speaker

⑱ Vent hole

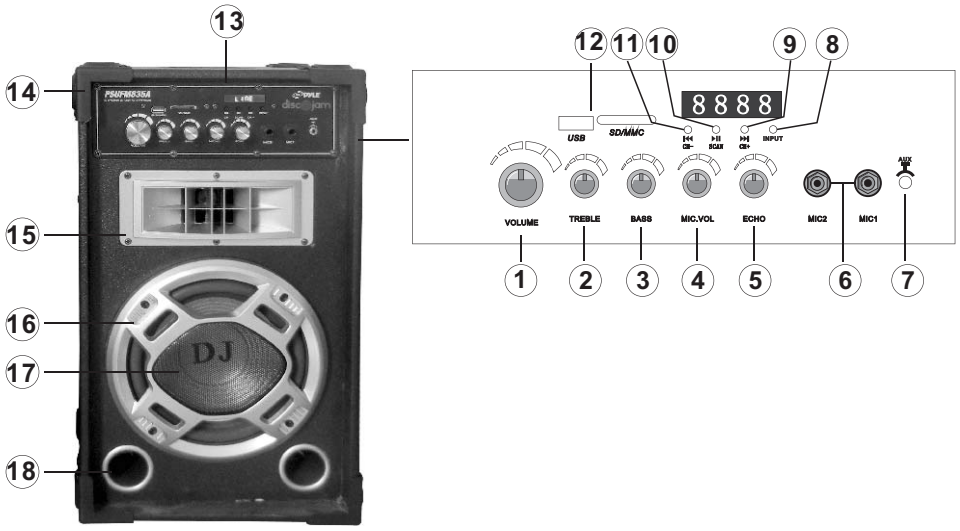

Speaker Board Schematic

1. Line-Out/Aux Audio Output
2. Line-In/Aux Audio Input
3. Vice-Box Power OUTput
4. Fm Antenna
5. AC Power Supply
6. Power Switch
7. Voltage Selector Switch

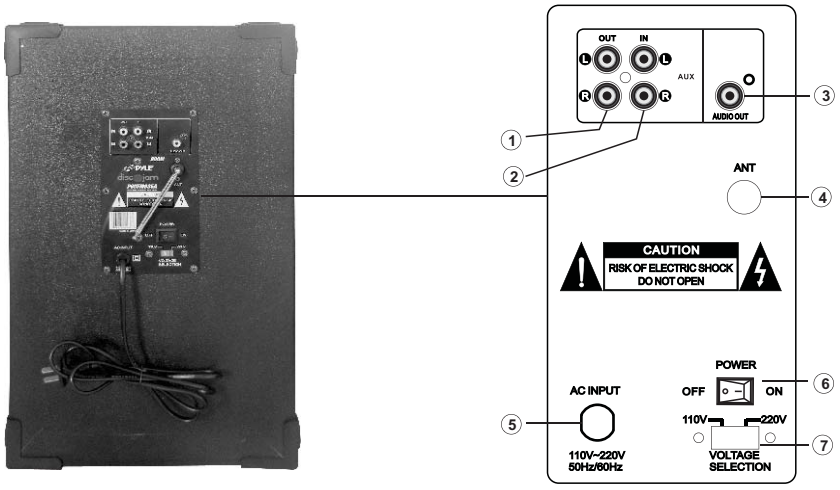

Instructions

Turning ON/OFF

The Speaker can be powered when connected to mains power.
1.Connect the power cable to the top of the unit.
2.Connect the other end of power cable to mains power.
3.Turn on the switch at the mains power point.
4.The unit will automatically power on when connected to mains power.

Instructions

Using the Wired Microphone

You can connect the wired microphone to this unit using the MIC INPUT located on the top of control panel. You will require an adapter if your wired microphone does not use a 1/4" plug.
1.Turn of the unit.
2.Connect your wired microphone to the MIC INPUT located on top of the control panel.
3.Adjust the microphone volume by tuning the MIC VOL/ECHO knobs located on top control panel.
NOTES: You can use the wired microphone(not included) and wireless microphone at the same time.

Connecting a Guitar

You can connect your Guitar to unit using the 1/4" GUITAR INPUT plug.
1.Turn on the unit.
2.Connect your guitar cable to GUITAR INPUT port on top control panel.
3.Adjust the volume by turning the GIUTAR VOL on top control panel.

Instructions

USB/SD Card Playback

You can play music from USB stick or SD Card using the USB/SD slot on the Speaker.

1.Turn on the unit.
2.Insert your USB or SD card into the slot.
3.Once inserted the USB or SD card unit will begin automatically play.
4.You can use the PRE/NEXT/PLAY/PAUSE controls to play music.
NOTES:The speaker system can play the following audio file formats: MP3,MP4,WMA.Use a USB/SD Card with less than 32GB.It need several seconds to play when your USB/SD Card full of contents.

Using the Radio

1.Turn on the unit.
2.Press INPUT just once,it is FM Radio.
3.Press PRE/NEXT to select the radio station.
4.Ensure that you have the extended antenna located on the rear of the speaker. It will ensure the best possible radio quality and signal strength.
5.At the first use of the radio, press NEXT button twice, it will auto search and store the radio statio ns.

disco jam

PYLE®

www.pyleaudio.com

tel: 718.535.1800 fax: 718.236.2400

1600 - 63rd StreetBrooklyn,N Y,11204